

# GHS-550HS

## Hotplate Stirrer

### Quick Start Guide

#### What's in the box:

- Quick Start Guide
- Hotplate Stirrer
- Stirring Bar
- Power Cable(s)

#### INITIAL SETUP

- Unpack the hotplate stirrer and place on a stable, temperature resistant surface.
- Ensure the location of the hotplate stirrer is clean and free of explosive, flammable and hazardous substances.
- Place the hotplate stirrer at least four inches (4") from the wall or any other items.
- Keep the hotplate stirrer away from the effects of high magnetic fields.
- Never cover the hotplate stirrer.
- Ensure that the power cord does not make contact with the hotplate or melting and exposure to dangerous voltages can occur.
- Do not operate the hotplate stirrer with a damaged power cord.
- Connect the power cord to the appropriate voltage power outlet.

#### EXTERNAL SENSOR INSTALLATION (OPTIONAL)

- 1) Install the sensor support stand on the rear of the unit.
- 2) Connect the external sensor plug into the appropriate port on rear of the unit.
- 3) Secure the external sensor into the support stand.
- 4) Ensure that the external sensor is at least one inch (1") from the bottom of the vessel.



*GHS-550HS with optional temperature sensor and support stand installed.*



*Continued ...*

# GHS-550HS Hotplate Stirrer Quick Start Guide

## OPERATION

- 1) Use the main power switch located on the left side of the unit to power-up the hotplate stirrer. The unit will perform self-diagnostics.
- 2) Place a vessel with the desired liquid on the surface of the hotplate stirrer and carefully place the stirring bar in the vessel.
- 3) If used, lower the external sensor into the liquid inside the vessel. Ensure that the external sensor is at least one inch (1") from the bottom of the vessel. If no external sensor is used, the unit's internal sensor will be active.
- 4) Temperature and stirring speed can then be set using the two control knobs to the right of the display panel.

**NOTE:** Main Power Switch is located on the left side of the unit. Used to power the hotplate stirrer ON or OFF.

### Setting temperature function:

- Set the desired temperature by slowly rotating the temperature control knob labeled 'HEAT' to the desired value shown on the display.
- Press the HEAT knob to begin heating.  
**IMPORTANT:** Please use caution when the unit is heating to avoid personal injury.
- The LED display will show the actual temperature value while heating.
- The heat function can be turned off by pressing the HEAT knob again.

### Setting stirring function:

- Set the desired stirring speed by slowly rotating the speed control knob labeled 'STIR' to the desired setting.
- Press the STIR knob to begin stirring.
- The stirring function can be turned off by pressing the STIR knob again.

### LED display

Displays the unit status and all set values. When setting both heating and stirring, the heat (temperature) values will be shown to ensure user safety.



### Heat light

Illuminates when the heating function is active.

### Stir light

Illuminates when the stirring function is active.

### HEAT control knob

Used to set the desired temperature of the hotplate.

### STIR control knob

Used to set the desired stirring speed of the unit.



### Customer Service, Sales and Technical Support:

Phone: 1 (800) 394-4562 • 1 (201) 599-1400

Fax: 1 (201) 599-1406 • E-mail: [mail@globescientific.com](mailto:mail@globescientific.com)